

2-14-1946


599397

UNITED STATES DEPARTMENT OF AGRICULTURE

FARM SECURITY ADMINISTRATION

X LOW COST KITCHEN SINK DRAIN

FOR FARM HOMES

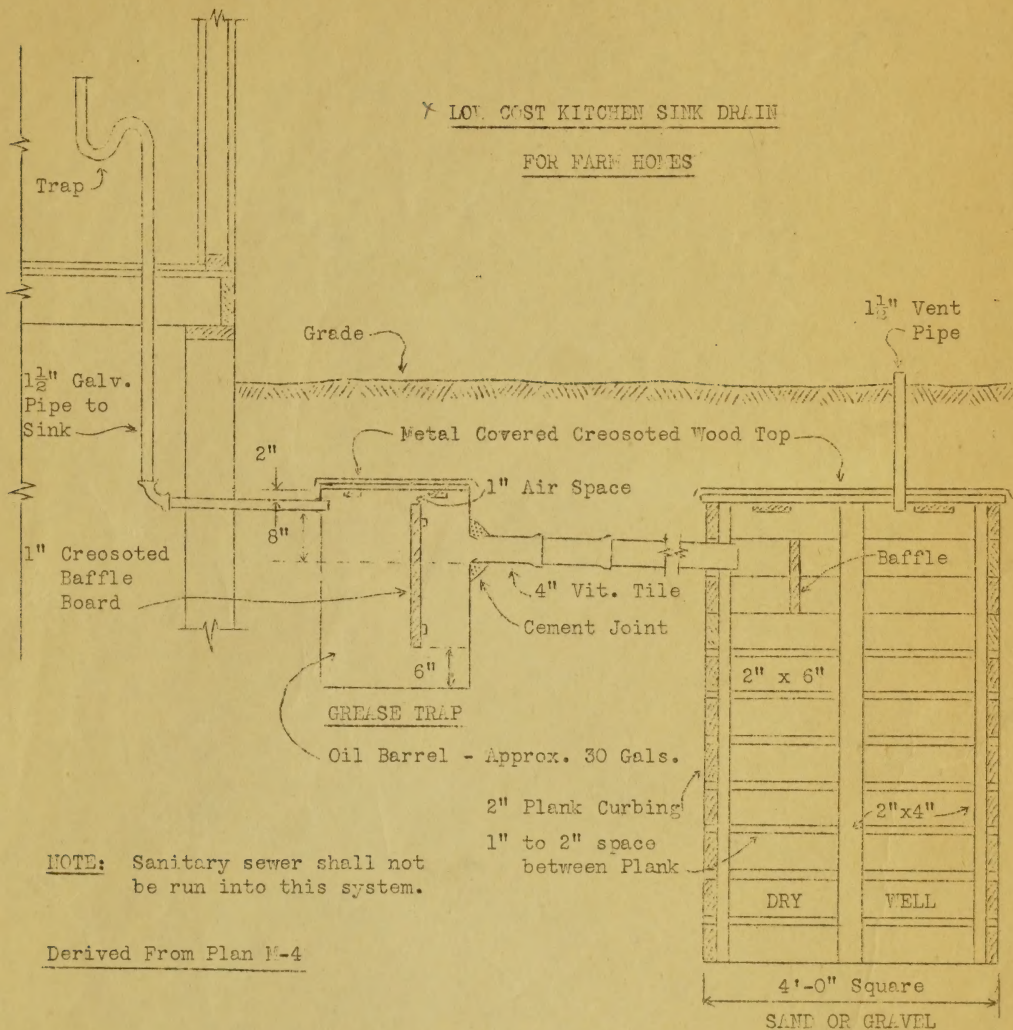

NOTE: Sanitary sewer shall not be run into this system.

Derived From Plan M-4

REMARKS:

No part of the sewage system shall be closer than 50 feet to a well. The grease trap may be constructed of concrete, large sewer pipe or by using an oil barrel as shown in the sketch. Seal the tile joints, using a concrete mixture of one part cement and two parts clean sand with enough water added to make a thick mix. A small amount of waste or oakum is packed into the bell to prevent the concrete from working through the joint. The tile should be laid with an even fall of about 1/4 inch per foot.

The dry well may also be built of rock, brick, concrete block, or tile laid with open joints to allow liquids to seep into the soil.

JUL 10 1946

